

CLASSPAD 330 & 330 PLUS HANDHELD OS UPDATE

PLEASE NOTE: You will require your ClassPad USB cord included in box at purchase.

1. Go to http://edu.casio.com/products/cp_soft/cp_agreement.html
2. Read software licence agreement.
3. You can either accept or not accept. Not accepting will terminate the updating process. Accepting will take you to the following page.
4. Under ClassPad 300 series tick OS update for ver. 3.06.4000
Under ClassPad 300 PLUS series tick OS update for ver. 3.10.4000
5. Go to the bottom of the page and click next
Click Version 3.06.1000 for ClassPad 300 Series
Click Version 3.10.1000 for ClassPad 300 PLUS Ser
6. A new window will open
7. Double click on the file
8. Wait while a new window loads
9. InstallShield wizard will open
10. Click next
12. Read terms and conditions
11. You can either accept or not accept. Not accepting will terminate the updating process. Accepting will take you to the following page.
12. Follow the prompts on the computer window as outlined below. Do not click OK until you complete the below.
13. Plug in your USB cord to the computer and the other end into your ClassPad
14. Exit out of the connectivity screen (do not click on connect via USB)
15. Select the menu option and scroll across to the communication folder.
16. Click LINK and OS UPDATE and OK
17. Head back to your computer and click OK.
18. OS Update DO NOT UNPLUG CLASSPAD FOR ANY REASON. If you are on a laptop, make sure it is charging. If connection is interrupted during the update, your ClassPad may crash and be irreparable.

Refer back to your ClassPad.

19. Update will begin to load – a green progress bar will appear on your computer screen.
20. ClassPad will restart itself
21. Align ClassPad screen
22. Set ClassPad settings to your preference (We suggest setting Power Save Mode to 1 hour, in order to preserve battery life).

Your Classpad should be updated.