CLASSPAD II (fx-CP400) HANDHELD OS UPDATE

PLEASE NOTE: You will require your ClassPad USB cord included in box at purchase.

- 1. Go to: http://edu.casio.com/support/en/agreement.html#1
- 2. Read software licence agreement.
- 3. You can either accept or not accept. Not accepting will terminate the updating process. Accepting will take you to the following page.
- 4. Under fx-CP400(ClasspadII) series, click Version 2.01.2 (select Mac or PC pending on your usage)
- 5. Double click on the file to download (little grey boxed arrow next to red font)
- 6. Wait while the file downloads
- 7. Double click the downloaded software
- 8. Click next
- 9. Read terms and conditions
- 10. You can either accept or not accept. Not accepting will terminate the updating process. Accepting will take you to the following page.
- 11. Exit out of the connectivity screen (do not click on connect via USB, instead click the X)
- 12. Select the menu option and scroll across to the communication folder.
- 13. Click LINK and OS UPDATE and OK
- 14. Head back to your computer and click OK.
- 15. OS Update DO NOT UNPLUG CLASSPAD FOR ANY REASON. If you are on a laptop, make sure it is charged. If connection is interrupted during the update, your ClassPad may crash and be irreparable. If your ClassPad crashes, please email the Casio Education Team

Refer back to your ClassPad.

- 16. Update will begin to load a green progress bar will appear on your computer screen.
- 17. ClassPad will restart itself
- 18. Align ClassPad screen
- 19. Set ClassPad settings to your preference (We suggest setting Power Save Mode to 1 hour, in order to preserve battery life).

Your Classpad should now be updated